



<How to update firmware>

Technical Support Team


1. Connect a Probee product to PC.
Execute the Probee Manager program.

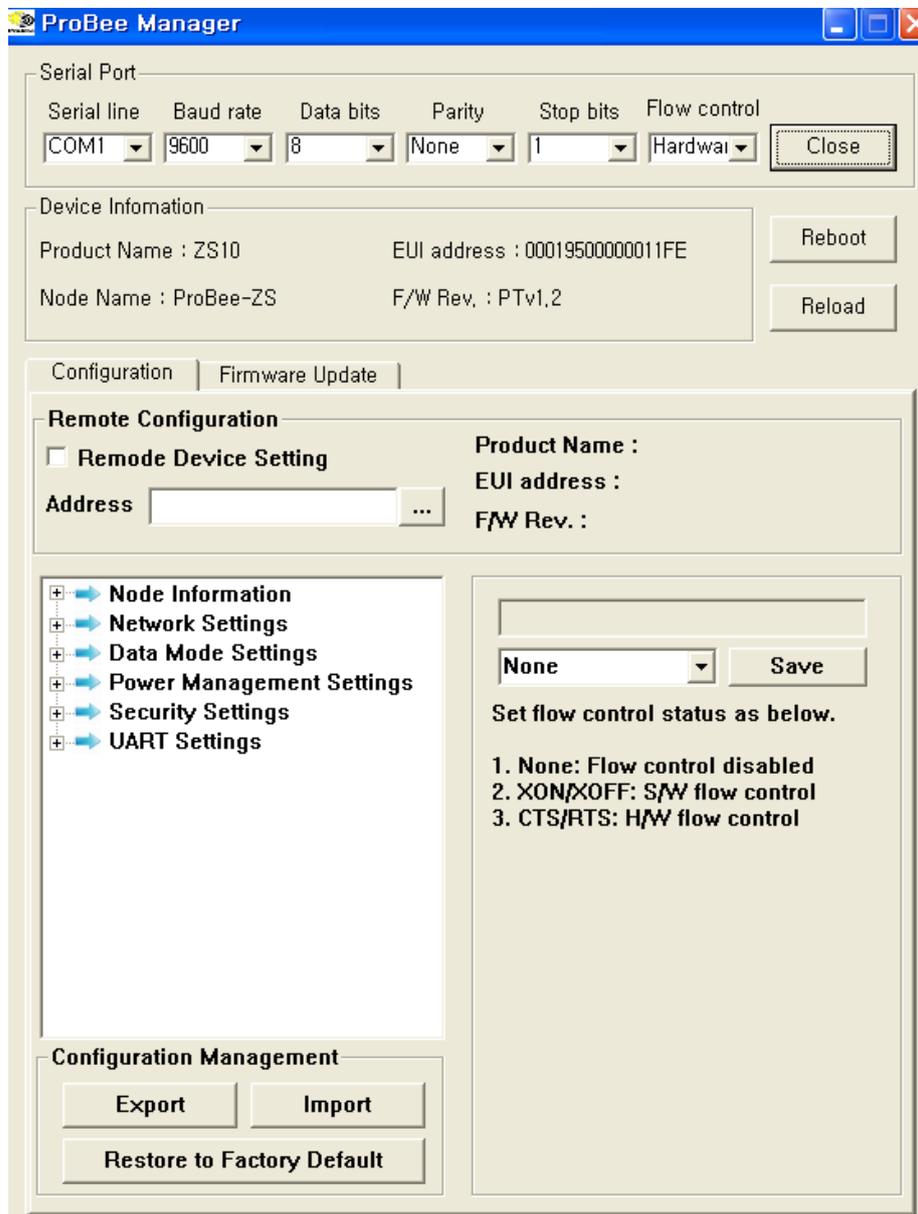


2. Set the Baud Rate value to “115200”
And push the [Save] button

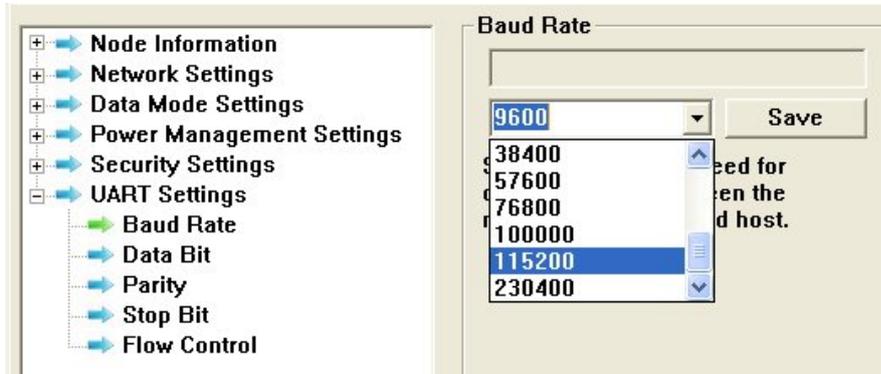

3. Set the Flow Control value to “None”
And push the [Save] button.

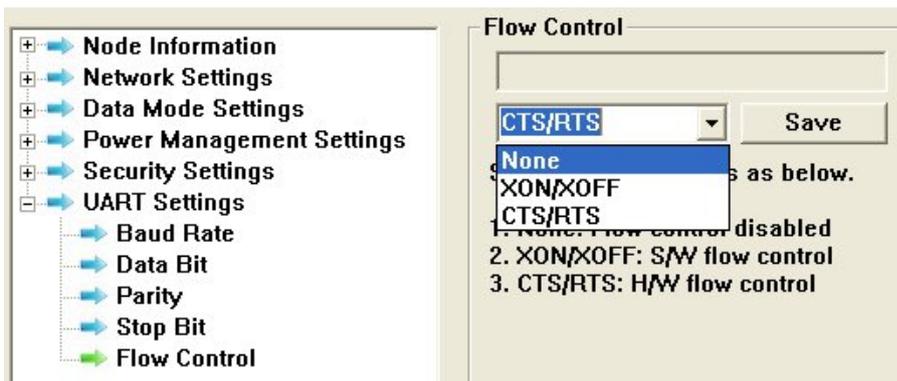


4. After pushing the [Reboot] button, let it recognize the Probee pushing the [Reload] button after changing the Serial Port setting.

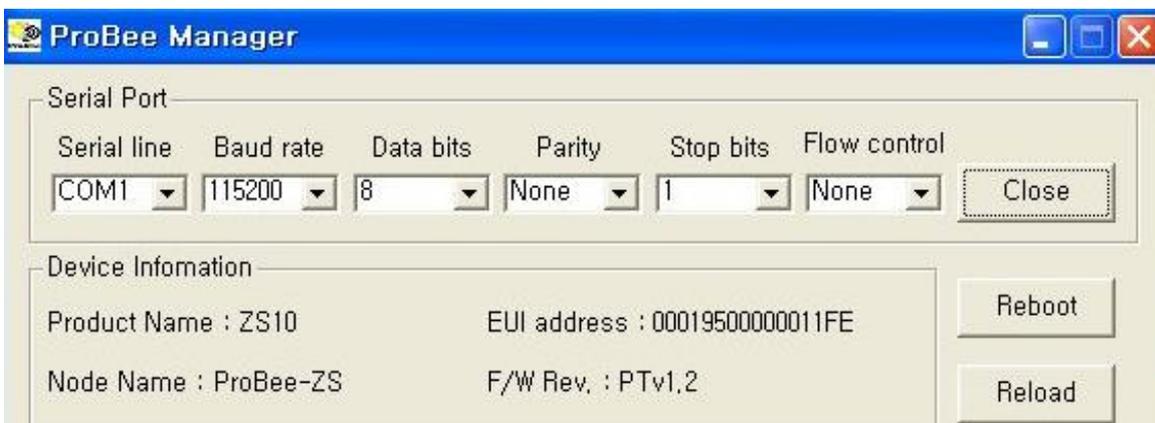


5. After selecting the [Firmware Update] tab on the Probee Manager program, pushing the [Download from web server] button.




6. Users can download the latest firmware file.

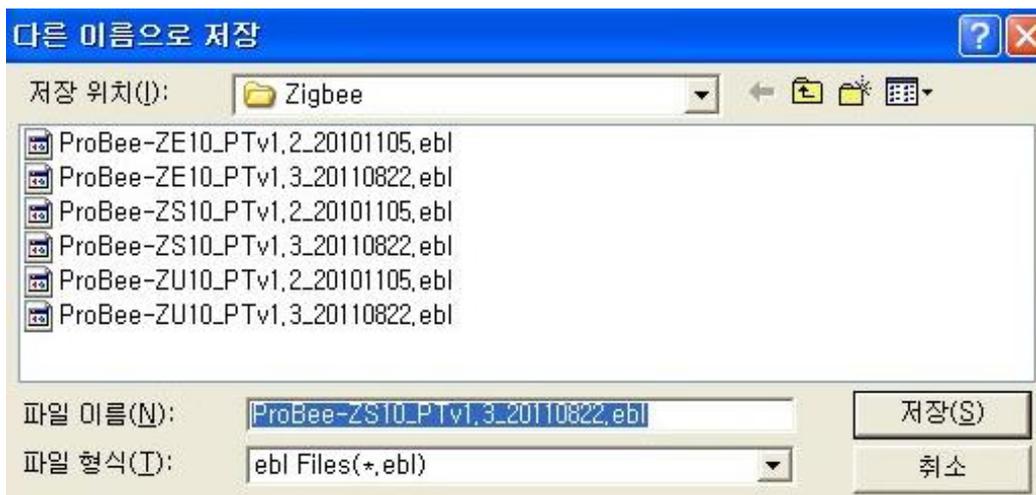

7. Install the firmware pushing the [Update] button on the Local Device Update.

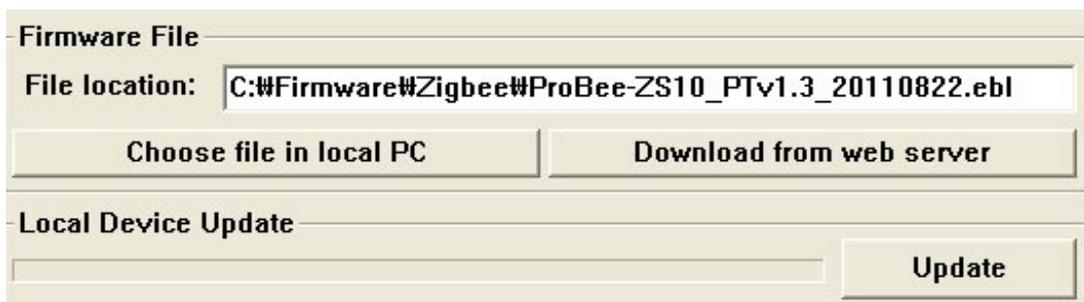

8. After installing the firmware, users can see the “Completed successfully.” message.

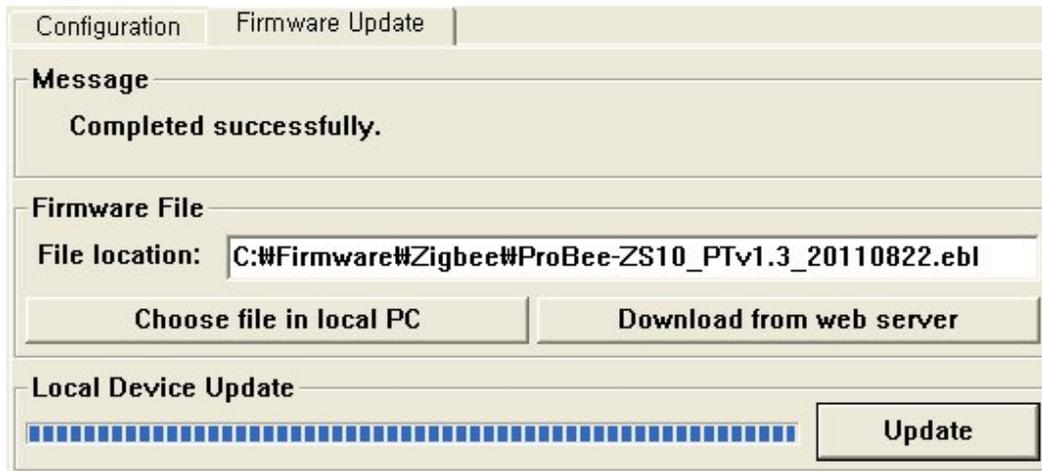

9. We recommend that it restores to factory default.