


## <How to connect Parani-SD with MAC Book>

2011/02/15

### 1. Setting values in Parani-SD

Set the Operation mode of Parani-SD to "MODE3".

It allows any Bluetooth devices to discover/connect to this Parani-SD.

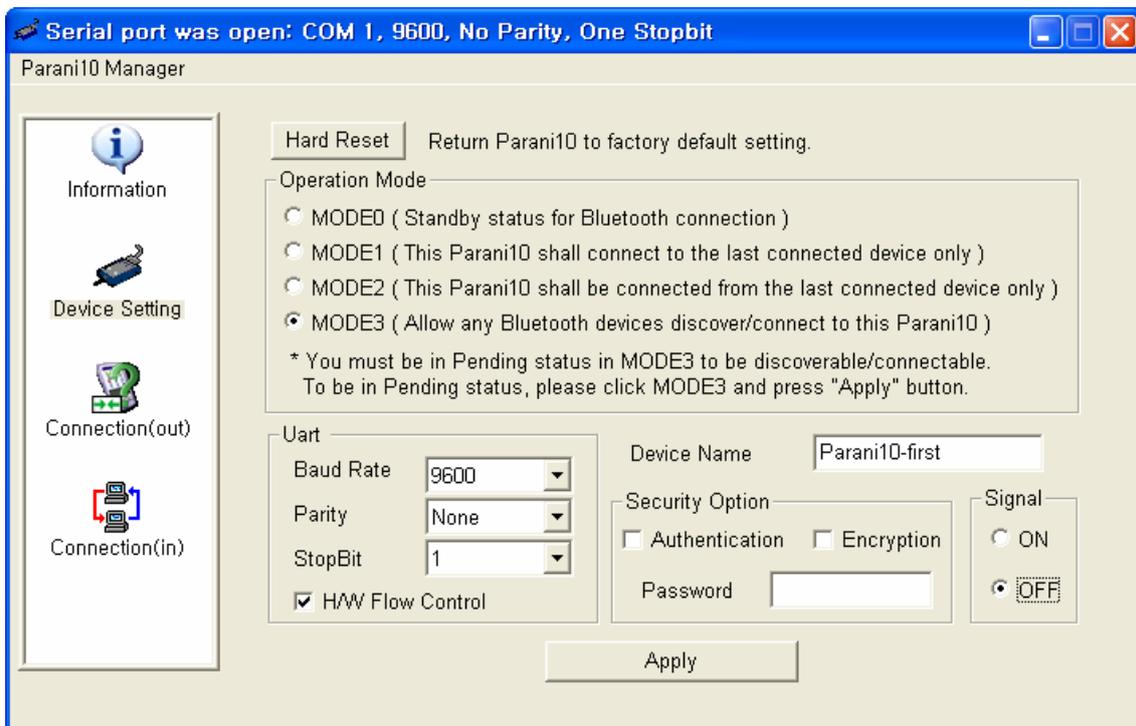


## 2. Bluetooth Settings in MAC Book

- Click "Set Up New Device"



- Select Parani-SD and Click "Continue"

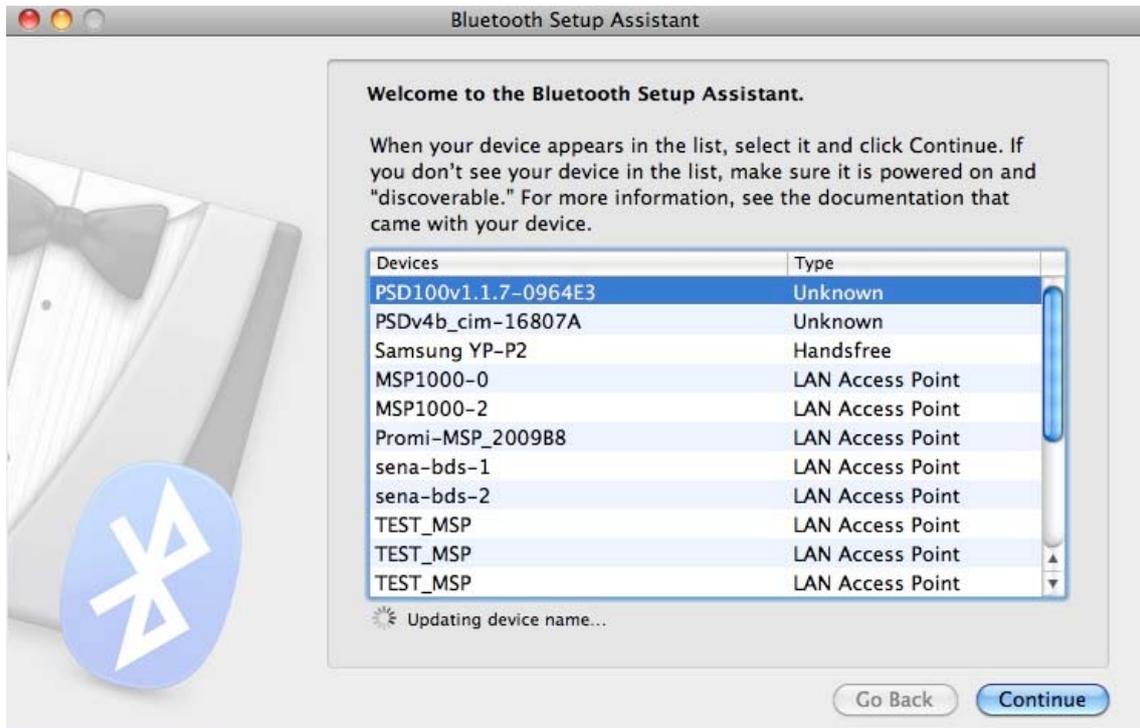


– Click “Passcode Options…”




– Select “Use a Specific passcode :” and Input “1234”(Default Pin code)  
And, Click “OK”



-You can see Below screen.

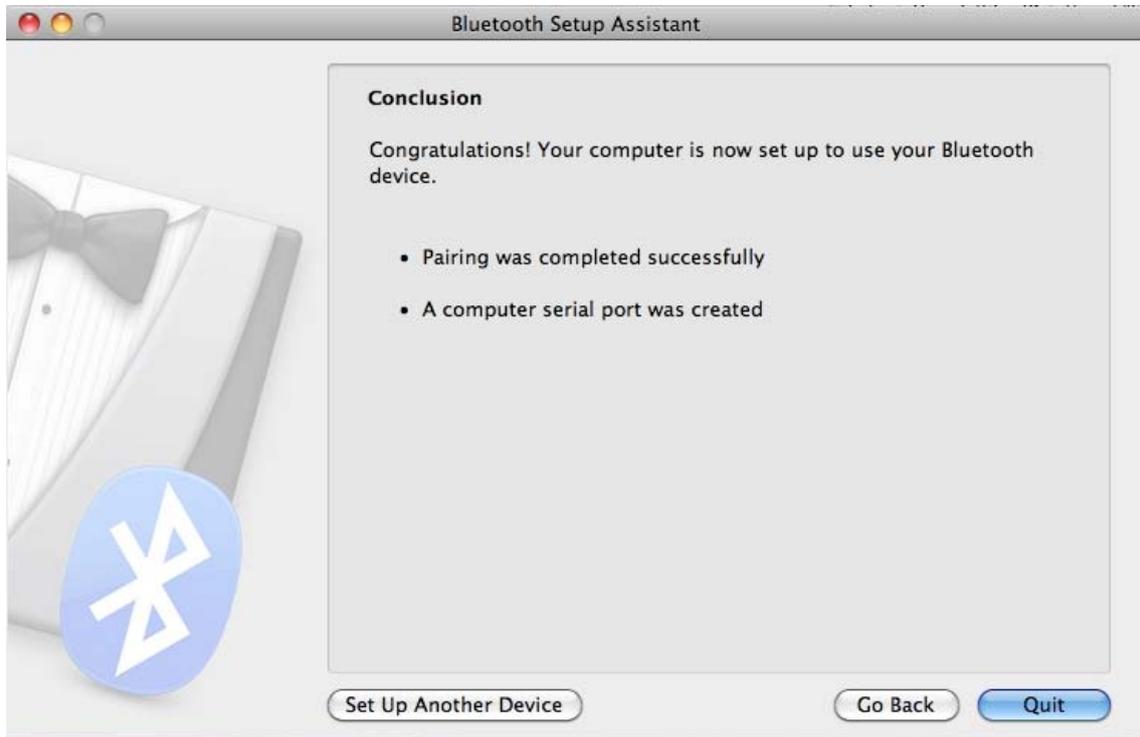


- You can see the Parani-SD device on Bluetooth

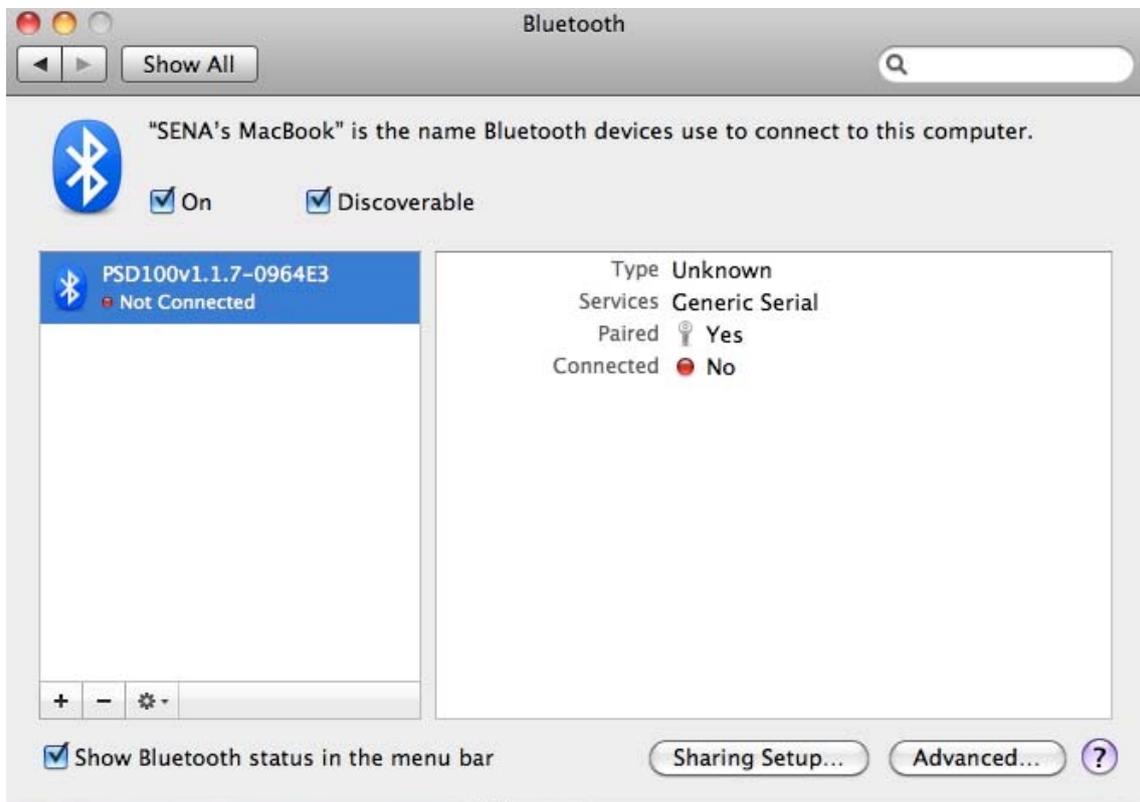


### 3. Communication between Mac book and Parani-SD

– Run SecureCRT software and Click “Quick connect” icon

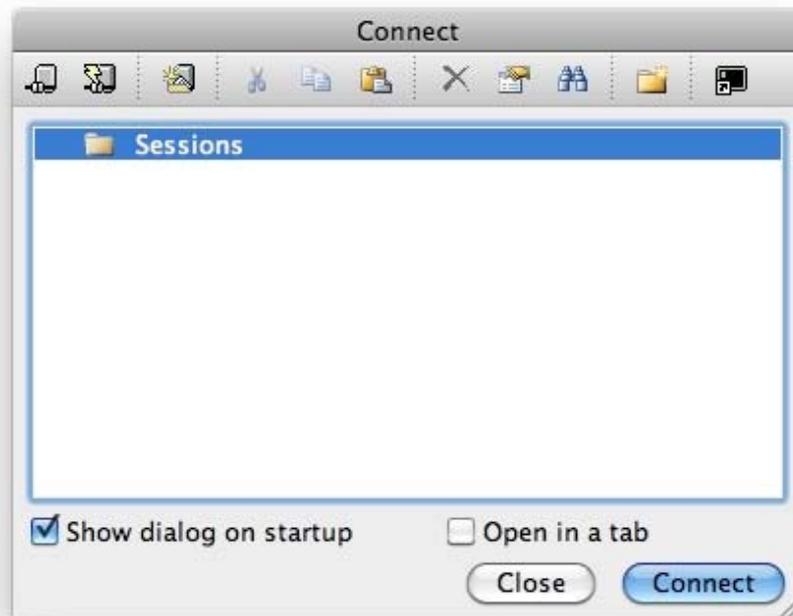

- Select below items.

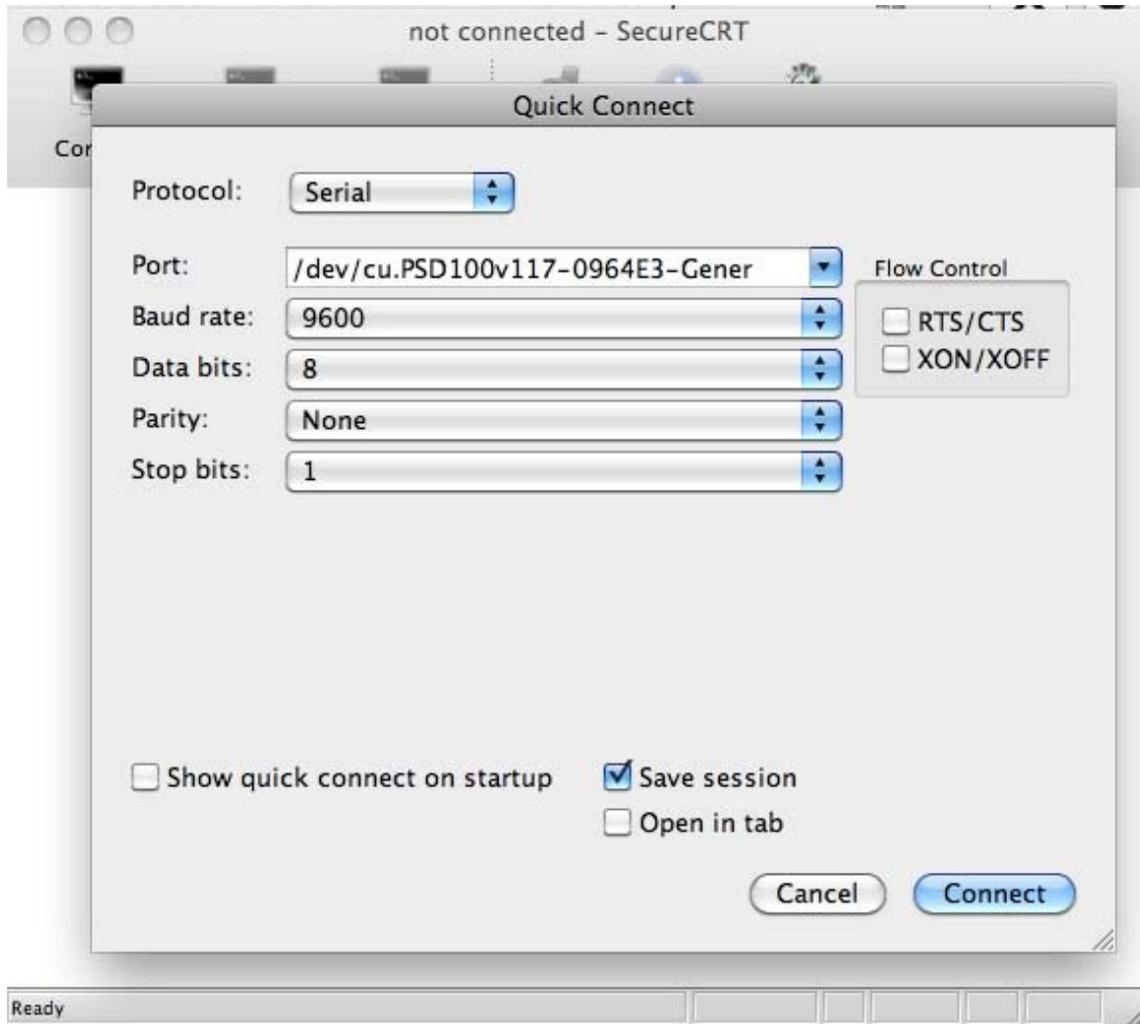

- Below is the demo screen between Mac book and Parani-SD

